

A

B

C



D

E

F


**General information:**

- Ensure that no ignition sources such as sockets, light switches, lamps, electrical switches, or other permanent ignition sources are present within the protection zone.
- Observe noise emissions. Maintain sufficient distance from neighboring buildings and from noise-sensitive windows of your own building.
- Maintain sufficient distance from neighboring properties.
- The base must be designed to ensure sufficient working and service space around the unit for maintenance and servicing of the heat pump.
- The heat pump must be installed completely outdoors (no open garages, etc.).
- Observe local laws and regulations.
- Refer to the illustration for the recommended dimensions.
- Observe additional information in the installation manual.
- Installation can be carried out on a base slab or a strip foundation.
- The base should protrude at least 30 mm above ground level.
- The base must be concreted with a thickness appropriate to the required load-bearing capacity.
- Provide a gravel and crushed stone bed for condensate drainage. The condensate must infiltrate into the ground or be connected to the drainage system using a siphon.
- Supply lines should be installed at a frost-proof depth.

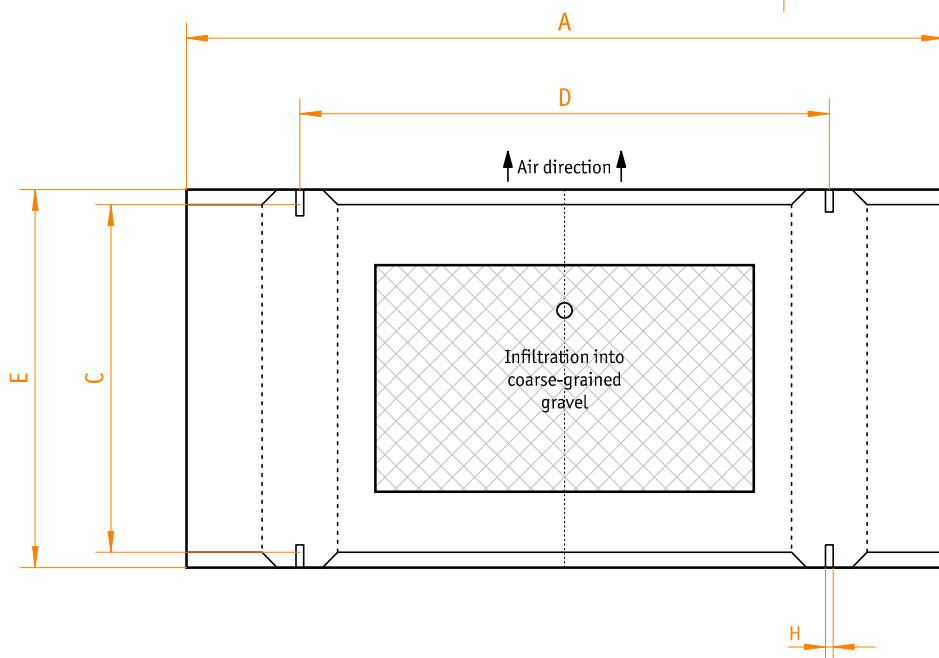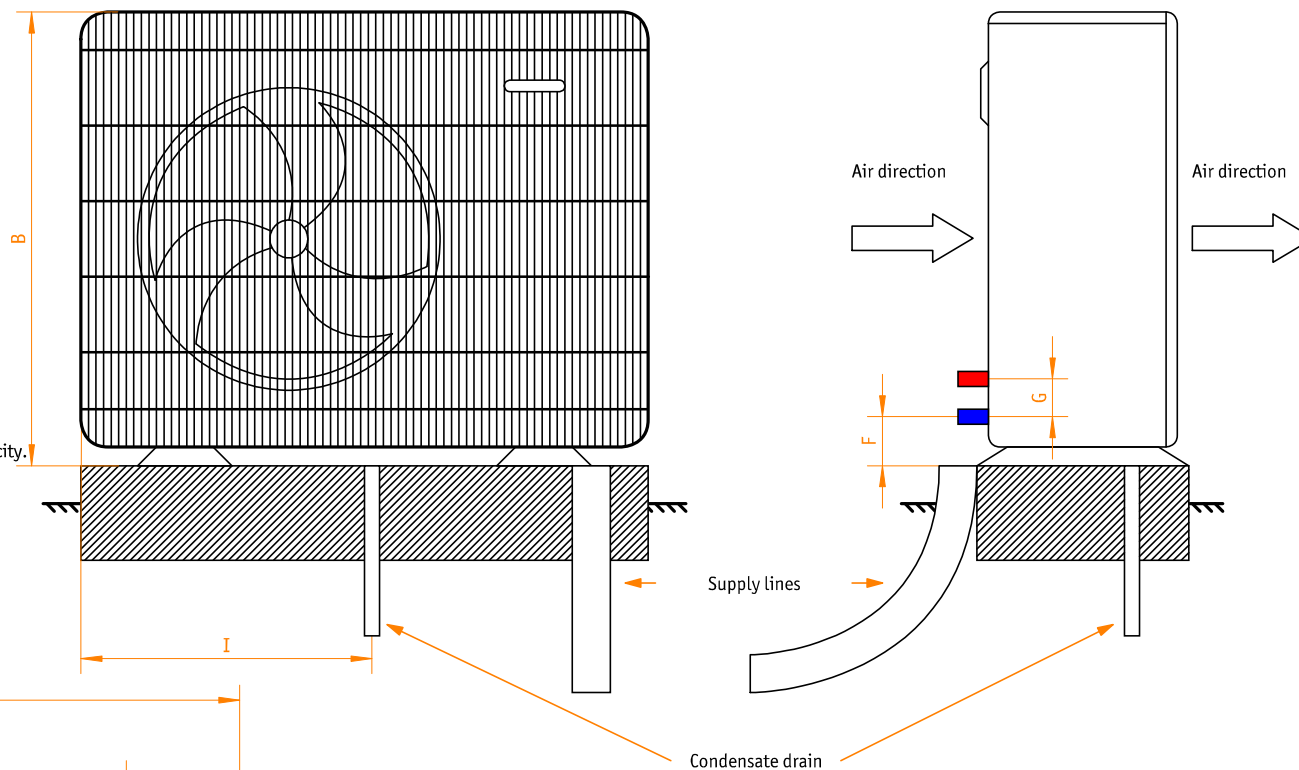

Model	A	B	C	D	E	F	G	H	I
WM-S	1102	1021	495	706	537	112	95	12	626
WM-M	1102	1021	495	706	537	112	95	12	626
WM-L	1377	1021	495	964	537	112	95	12	626
WM-XL	1377	1021	495	964	537	112	95	12	626

All dimensions in this table are given in mm.

Designation Foundation layout	Date	Name	Changes		Sheet count
	drawn by	11.05.2026	Küpper	Date	
Installation principle (not exhaustive) Reproduction only with written permission of MULTIBETON GmbH	checked				1
	MULTIBETON GmbH Heuserweg 23 53842 Troisdorf				Sheet no.
					1